

Using the OmniLog Data Management Program with Windows 7 / Vista®


First, download and install the latest version of OmniLog via the link on our web page:
www.intech.co.nz/omnilog

To use OmniLog when running Windows 7 / Vista requires a little tweaking:
On first run this error message pops up:

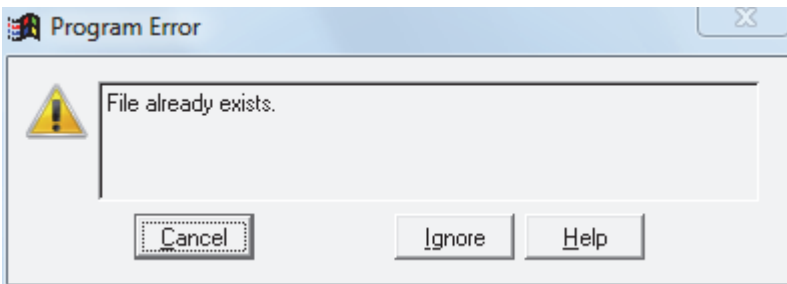


Click 'Cancel' to exit.

Right click on the **Omnilog Data Management** shortcut (Start > All Programs > OmniLog) and choose 'Properties':

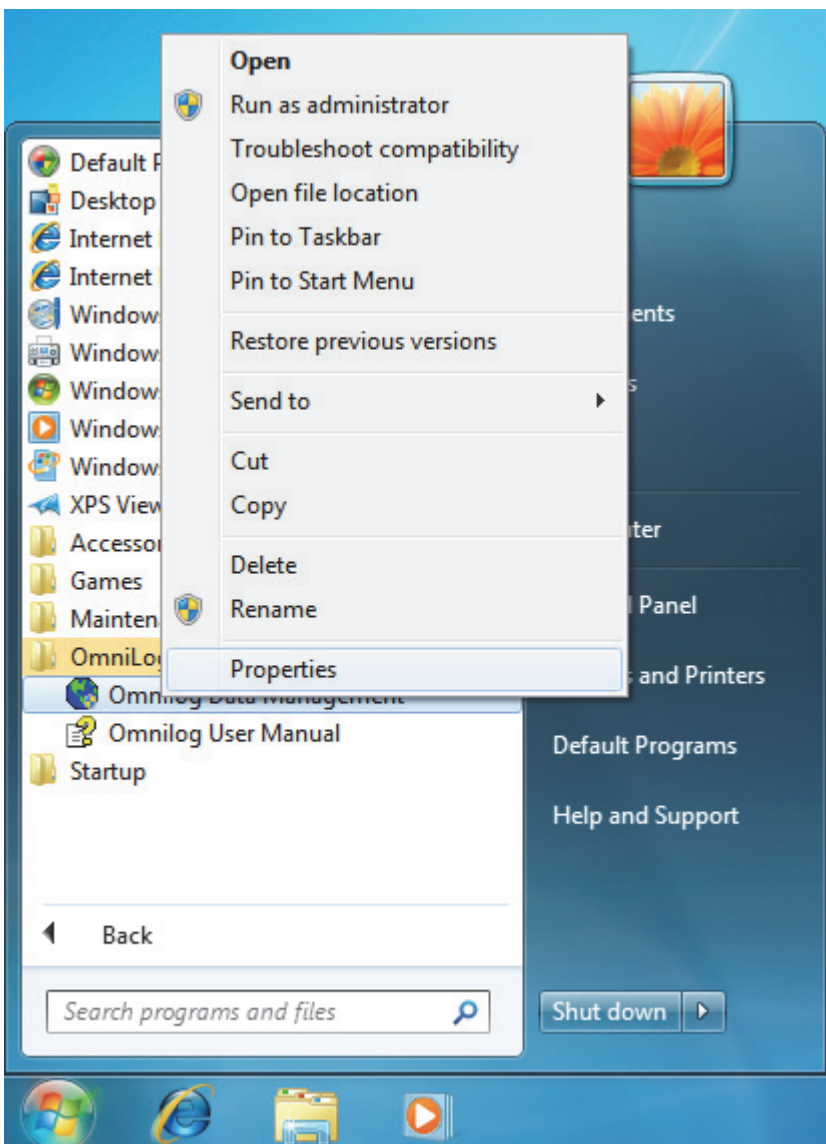

Click on the 'Compatibility' tab:

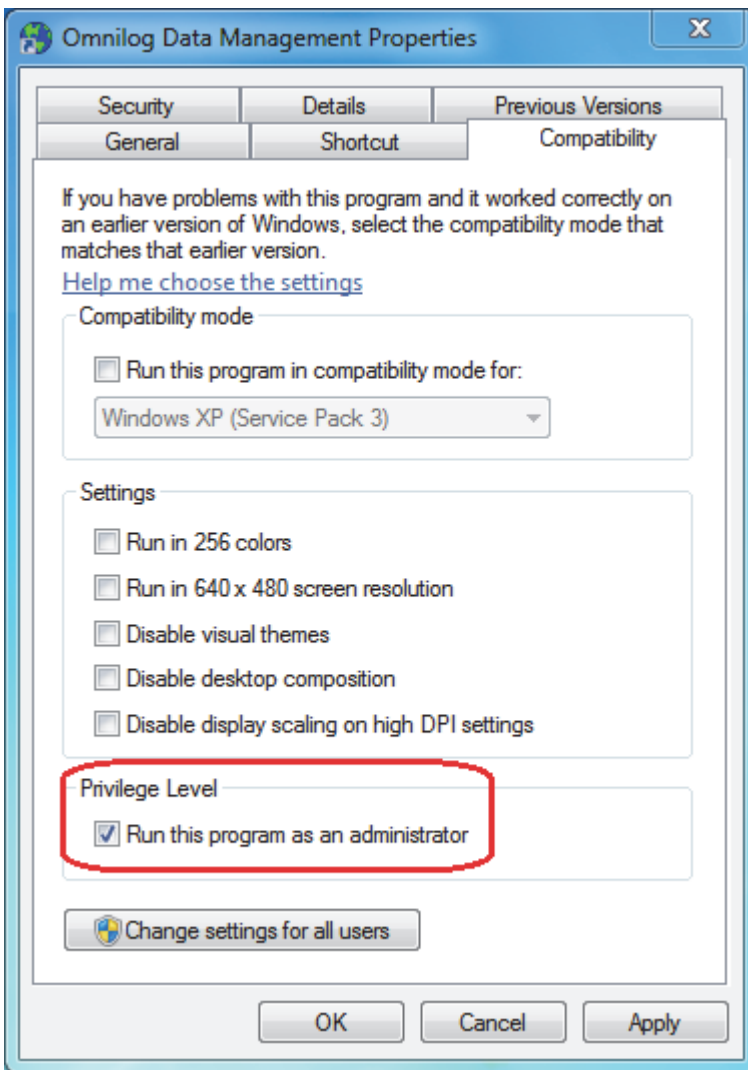

Tick the 'Run this program as an administrator' under Privilege Level.

Click 'OK'.

Note: An Administrator password may be required.

Using a USB Download cable with OmniLog on Windows 7 / Vista®:

If you are going to use a USB Download cable with OmniLog on Windows 7 / Vista, you will need to download and install the latest USB Driver via this link:

http://www.ftdichip.com/Drivers/CDM/CDM20824_Setup.exe

Note: You may need to run the file twice for correct USB driver installation.

Product Liability. This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to ongoing research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units at 25C, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.

Warning: These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independent fail-safe back-up system must always be implemented.

Intech INSTRUMENTS LTD

www.intech.co.nz

Christchurch Ph: +64 3 343 0646

Auckland Ph: 09 827 1930

Email: sales@intech.co.nz

Omnilog on Win7/Vista 020712